


SECTION VIEW

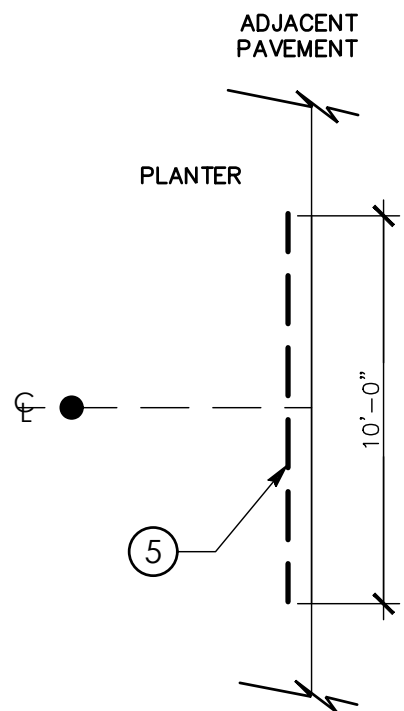

PLAN VIEW

NOTES:

1. TREE PLANTING, SEE TREE PLANTING DETAIL.
2. BARK MULCH, REFER TO SPECIFICATIONS.
3. ADJACENT CURB OR PAVEMENT, SEE PLAN.
4. NATIVE OR IMPORT SOIL.
5. LINEAR ROOT BARRIER, INSTALL CENTERED ON TREE, PARALLEL TO ALL HARD EDGES LESS THAN 5'-0" FROM TREE. ALL CORNERS SHALL BE 90 DEGREES. CONNECT ALL CORNERS WITH MANUFACTURER'S COUPLINGS. INSTALL PER MANUFACTURER'S SPECIFICATIONS. ALIGN TOP OF ROOT BARRIER PANELS FLUSH WITH FINISHED GRADE IN PLANTER.
6. COMPACTED SUBGRADE, SEE PLANS AND SPECS.
7. REFER TO SPECIFICATIONS AND PLAN SHEETS FOR MORE INFORMATION.



TOWN OF PARADISE
PUBLIC WORKS / ENGINEERING

5555 Skyway
 Paradise, California 95969
 Phone: (530) 872-6291 Fax: (530) 877-5059

Standard Detail L-4
TREE ROOT BARRIER

[Signature]
 Approved Date 3/30/2023